


3. System Menu

Display Method


Advanced model

Press two of the four corners of the V9 series unit screen one by one to display the system menu.

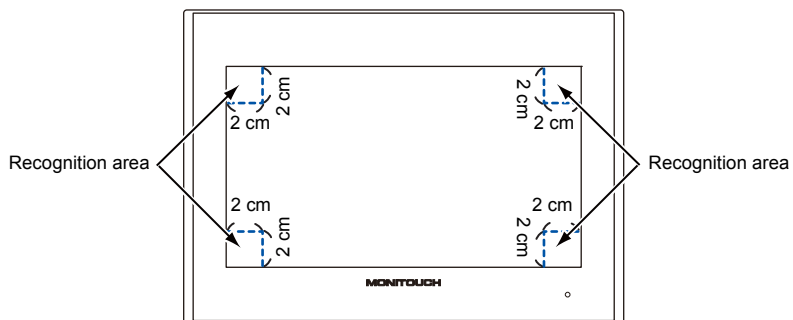


1. Press one corner of the screen for at least 2 seconds and release your finger when there is a beep.

Press the upper left corner for at least 2 seconds.

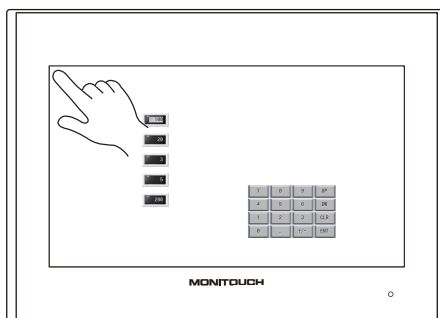

2. Then within one second, press a different corner and hold for at least 2 seconds to display the system menu.

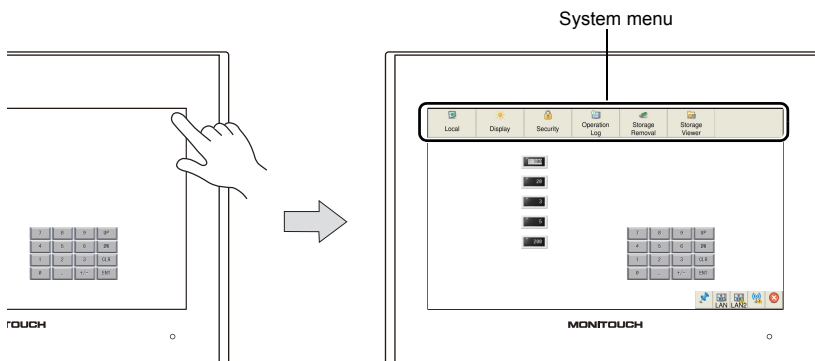


Press a different corner for at least 2 seconds.

- * If any of the items given below are placed in a corner on the screen, the system menu will not be displayed. Be sure to press a corner where none of the items are placed. If these items are placed in all four corners of the screen, switch the screen to one that has open corners and perform the above procedure to display the system menu.

Switches, data display parts with switches, display areas, scrolling messages, slider switches, scroll bars, and table data display parts

Standard/Lite models

Press the [SYSTEM] switch.*

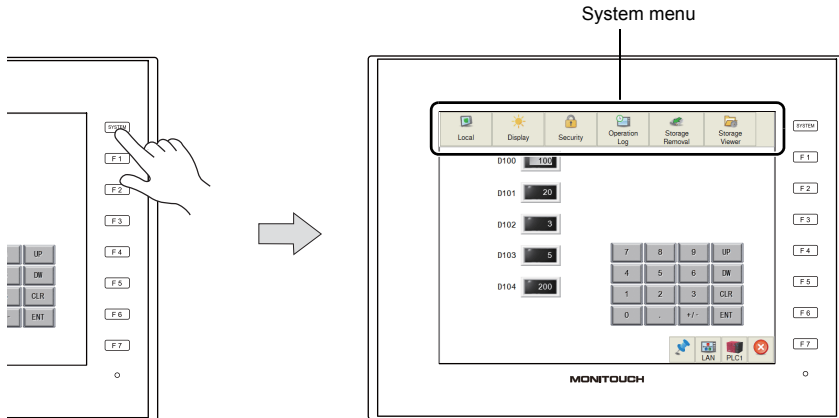


* If the system menu does not appear by pressing the [SYSTEM] switch, the [System Switch Prohibited] checkbox (page 1-6) was selected while editing the screen program on V-SFT version 6.

System Menu Types

There are two types of system menus as shown below:

 System menu in RUN mode



System menu in Local mode



Item	Description
Local / RUN	Switches the operation mode between RUN and Local.
Display	Used for brightness adjustment and backlight control of the V9 series unit. For details on the operating procedure, refer to page 1-7.
Security	Displayed only when [Use security function] is selected at [System Setting] → [Other] → [Security Setting] using V-SFT version 6. For details on the operating procedure, refer to page 1-8. * For details on the security function, refer to the V9 Series Reference Manual 2.
Operation Log	Displayed only when [Use operation log function] is selected at [System Setting] → [Other] → [Operation log Setting] using V-SFT version 6. This is used for displaying the operation log viewer. * For details on the operation log function and operation log viewer, refer to the V9 Series Reference Manual 2.
Storage Removal	Used for stopping access to a connected storage device and reconnecting to a storage device. For details on the operating procedure, refer to page 1-14.
Storage Viewer	Used for checking the information of the connected storage device, or copying, moving, and deleting data between the connected storage devices. For details on the operating procedure, refer to page 1-16.