

SYS

All models	○
TELLUS4 HMI	△

SYS (SET_BZ) F1**Function: Buzzer control**

This macro command is used to control the buzzer of MONITOUCH.

Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

Setting range

	Value	Remarks
F0	SET_BZ	
F1	0: Normal 1: Error 2: Sound change	
F1+1	0: Standard 1: Short 2: None 3: Continuous*	Setting required if F1 = 2

* Incompatible with TELLUS version 4

Example

- \$u100 = 2 (W) [Sound change]
 - \$u101 = 2 (W) [None]
- SYS (SET_BZ) \$u100

The above program turns off the MONITOUCH buzzer.

Supplemental remarks

- The [Buzzer] tab window setting in the [Unit Setting] dialog ([System Setting] → [Unit Setting] → [Buzzer]) takes effect only at the time of initial connection of MONITOUCH.
- The result of macro execution is stored in \$s72.
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error